
CLIP ANGLE


Installation Guide

ASSEMBLY PROCEDURE:

- 1. If you ordered installation angles, it will come in a kit that includes clip angles, fasteners etc.,
- 2. Refer to shop drawings to determine set back of clip angles on jamb/head/sill in relation to wall.(If shop drawings were requested).
- 3. Measure set back distance of clip angles from wall and drill holes into wall as needed.
- 4. Attach clip angles to wall with substrate fasteners. (Substrate fasteners not provided by Reliable).
- 5. Place louver section into opening.
- 6. Shim around louver perimeter to provide proper clearance/deduct as mentioned in shop drawings. (If shop drawings were requested)
- 7. Once clearance specifications are met, use holes provided in clip angle to drill pilot holes in jamb.
- 8. Fasten clip angles to jambs with fasteners as provided by Reliable (Ship loose kit).
- 9. Refer to shop drawings to attach clips at HVBS & mullion suppports (If shop drawings were requested).
- 10. Notch the continuous Clip angle as needed to fit them in between the supports.
- 11. If extended sill is ordered, please place a bead of caulk between the opening & sill (Caulk supplied by others).


INSTALLATION DETAILS

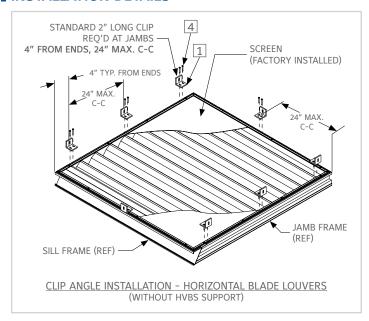


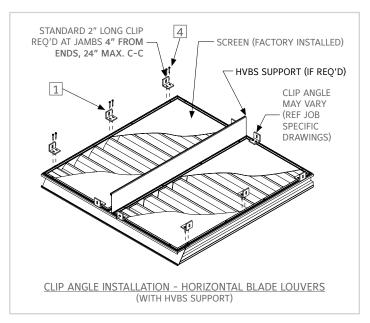


ITEM #	DESCRIPTION	QTY.	PART #	MATERIAL
SHIP LOOSE PARTS (SQUARE BALLOONS)				
1	CLIP ANG 2 X 2 X 1/4 X 2" LG W/2 .25 X .63 SLOTS	-	360502443	6063-T6 ALUM
2	CLIP ANG 2 X 2 X 1/4 (6" LG PUNCHED)	-	360502825	6063-T6 ALUM
3	ANG 2 X 2 X .25 X CONT.	-	341396M00	6063-T6 ALUM
4	SCR 10 X 1.5 HWH TEK	-	380430830	410/ZC


REFERENCE IMAGES

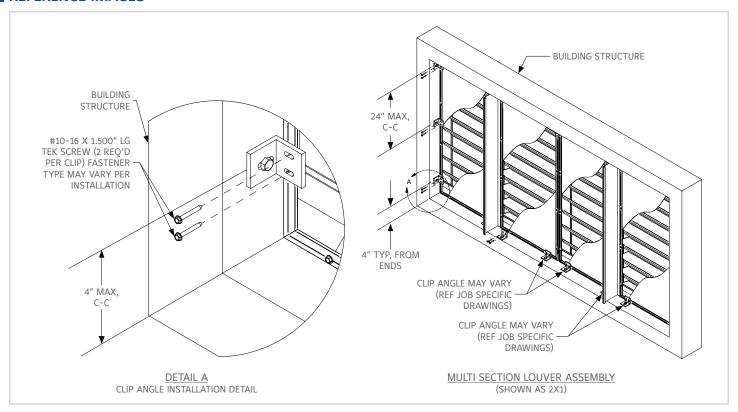


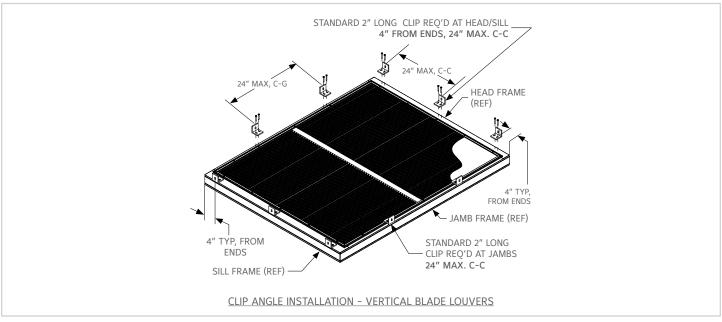



REFERENCE IMAGES

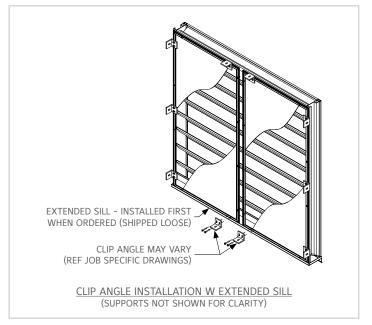

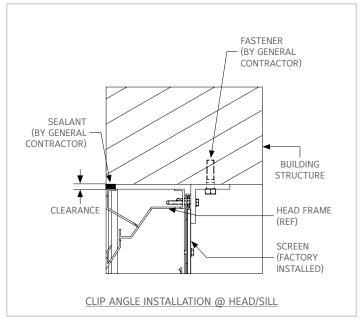

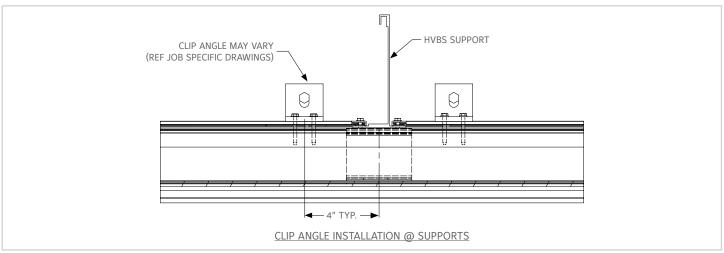

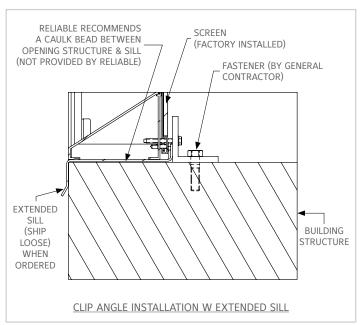

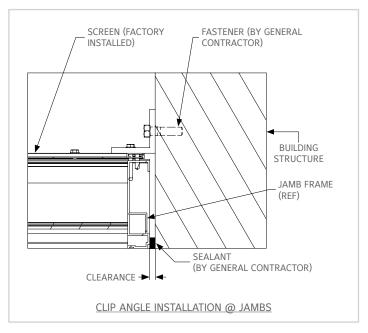

CONTINUOUS CLIP ANGLE INSTALLATION DETAIL

